

OV-12/24 SERIES INSTALLATION INSTRUCTIONS

VOLTAGE ADJUSTMENT RANGE: 6.2 – 33VDC ADJUSTMENT PROCEDURE:

- 1. REFER TO CHART 1 FOR SUGGESTED OVP TRIGGER VOLTAGES.
- 2. CONNECT TEST CIRCUIT AS SHOWN IN FIGURE A. TEST VOLTAGE SOURCE MAY BE ANY POWER SUPPLY WITH A SHORT CIRCUIT LIMIT OF LESS THAN 8 AMPS (OVP-12) OR 20 AMPS (OVP-24).
- 3. ENERGIZE AND ADJUST THE TEST VOLTAGE SOURCE TO THE DESIRED OVP VOLTAGE.
- 4. ROTATE THE OVP ADJUSTMENT POT CCW (FROM ITS MAXIMUM CW POSITON) UNTIL THE OVP FIRES AS INDICATED BY A BY A 1 VOLT READING ON M1. LEAVE THE POT IN THIS POSITION, UNIT IS NOW READY FOR INSTALLATION INTO POWER SUPPLY.
- 5. BOLT THE OVP ONTO THE POWER SUPPLY USING THE MOUNTING HOLES PROVIDE. CONNECT THE WHITE (+) LEAD TO THE POSITIVE OUTPUT AND THE BLACK (-) LEAD TO THE NEGATIVE OUTPUT.

MODEL	INTERMITTENT	CONTINUOUS
OVP-12	12A	8A
OVP-24	30A	20A

CHART 1

POWER SUPPLY	SUGGESTED OVP	
OUTPUT VOLTAGE	TRIGGER VOLTAGE	
5 VDC	6.2+/-0.4V	
6 VDC	7V	
12 VDC	14V	
15 VDC	17V	
18 VDC	21V	
20 VDC	23V	
24 VDC	27V	
DUAL +/-12 VDC	27V	
DUAL +/- 15 VDC	33V	

FIGURE A

CUDDENT			
CUKKENI	+		1+
LIMITED		\frown	OVP-12
POWER		(M1)	OR
SUPPLY		\bigvee	OVP-24
	_		-
	-		1

Condor DC Power Supplies Inc. will not be liable for the safety, reliability or performance of these power supplies if a) any changes, modifications or repairs are carried out by other than authorized agents of Condor DC Power Supplies Inc., or b) the installation of the supply is not in accordance with these installation instructions and the applicable UL, CSA, EN, and IEC safety standards.

41-35625-0001 Rev. A 5/4/06